

List of Warning/Indicator Lights



Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



ECB<sup>\*1</sup>/VSC warning light



Electric power steering warning light



Pre-collision system warning light <sup>\*2</sup>

<sup>\*1</sup>: Electronically Controlled Brake System

For further information, refer to the Owner's Manual.

Have the malfunction repaired immediately.



Open door warning light



Low fuel level warning light



(On the instrument cluster)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



Tire pressure warning light



Master warning light

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Fog light indicator



Hybrid SNOW indicator



Shift position and shift range indicators



Hybrid PWR indicator



Cruise control indicator



Damping mode indicator



AFS OFF indicator



Intuitive parking assist indicator<sup>\*2</sup>



Slip indicator



Driving ready indicator

<sup>\*2</sup>: If equipped

For further information, refer to the Owner's Manual.

## Spare Tire and Tool Compartment (If Equipped)

### ■ Jack, tools, and spare tire



- 1 Tools
- 2 Jack
- 3 Spare tire


### ■ Taking out the spare tire



- 1 Lift up the panel on the trunk floor, and remove the tool tray.
- 2 Loosen the center fastener and remove the spare tire.

## If the electronic key battery becomes discharged

### ■ Unlocking and locking the doors

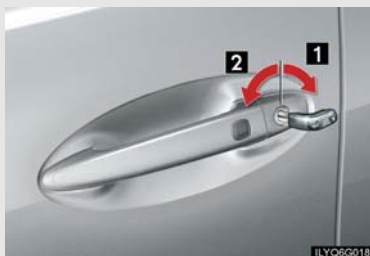

To unlock or lock the vehicle, use the mechanical key. The mechanical key is stored inside the electronic key.

- 1** Unlocks
- 2** Locks

### ■ Starting the hybrid system



- 1** Depress the brake pedal.
- 2** Hold the electronic key close to the power switch (within 0.4 in. [10 mm]), making sure that the button side of the key is facing toward you.
- 3** Press the power switch within 5 seconds after the buzzer sounds, keeping the brake pedal depressed.

For instructions on replacing the electronic key battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## What to do if ...

### If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.



#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.17)



#### Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the power switch. (→P.9)

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



## Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Tried to exit the vehicle with the electronic key and lock the doors without first turning the power switch OFF	Turn the power switch OFF and lock the doors again.
	Closed the trunk while the electronic key is still inside and all doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm rings continuously	Switched to ACC mode while the driver's door is open (Opened the driver's door when the power switch is in ACC mode.)	Turn the power switch OFF and close the driver's door.
	Turned the power switch OFF while the driver's door is still open	Close the driver's door.